



Copper Fittings for New Zealand Plumbing

to suit NZ3501 plumbing tube

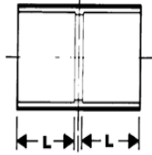


Connectors - Female/Female

Nominal Bore (mm)	Order Code	Std Pack
15	DCC015	10
20	DCC020	10
25	DCC025	10
32	DCC032	10



Reducers - Female/Female

Nominal Bore (mm)	Order Code	Std Pack
15 x 10	DRR01510	10
20 x 15	DRR02015	10
25 x 15	DRR02515	10
25 x 20	DRR02520	10
32 x 20	DRR03220	10
32 x 25	DRR03225	10
40 x 32	DRR04032	10
50 x 40	DRR05040	10

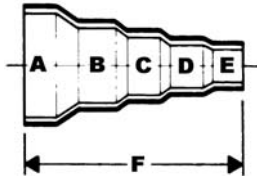


Universal Stepped Reducers

Nominal Bore (mm)	Order Code	Std Pack
50 x 40 x 32 x 25 x 20	DRU05020	1
65 x 50 x 40	DRU06540	1
100 x 80 x 65 x 50	DRU10050	1

Copper Fittings for New Zealand Plumbing


to suit NZ3501 plumbing tube

90 Degree Bends - Male/Female

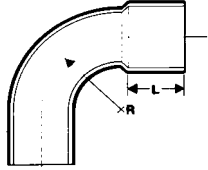


Nominal Bore (mm)	Order Code	Std Pack
15	DBN015	10
20	DBN020	10
25	DBN025	10
32	DBN032	10
40	DBN040	10
50	DBN050	1

92.5 Degree Bends - Male/Female

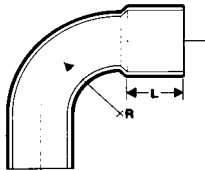


Nominal Bore (mm)	Order Code	Std Pack
65	DB2065	1
80	DB2080	1
100	DB2100	1
150	DB2150	1

135 Degree Bends - Male/Female

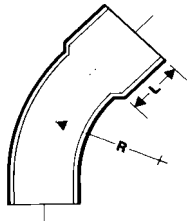

Nominal Bore (mm)	Order Code	Std Pack
15	DBF015	10
20	DBF020	10
25	DBF025	10
32	DBF032	10
40	DBF040	10
50	DBF050	1
65	DBF065	1
80	DBF080	1
100	DBF100	1
150	DBF150	1


90 Degree Long Bends - Male/Female

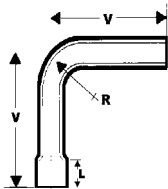

Nominal Bore (mm)	Order Code	Std Pack
15	DBN015L	10
20	DBN020L	10
25	DBN025L	10


Copper Fittings for New Zealand Plumbing

to suit NZ3501 plumbing tube

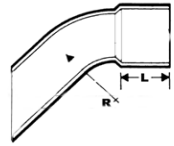


Branch Bends - Male/Female

Nominal Bore (mm)	Order Code	Std Pack
32	DBB032	10
40	DBB040	10
50	DBB050	1
65	DBB065	1
80	DBB080	1
100	DBB100	1

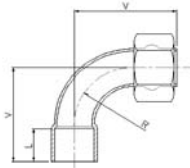


90 Degree Crox Bends

Nominal Bore (mm)	Order Code	Std Pack
15 x 1/2" BSP	DBN015CX	10
20 x 3/4" BSP	DBN020CX	10

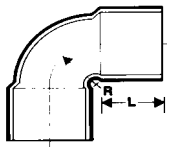

90 Degree Elbows - Short Radius - Female/Female


Nominal Bore (mm)	Order Code	Std Pack
15	DEN015S	10
20	DEN020S	10
25	DEN025S	10

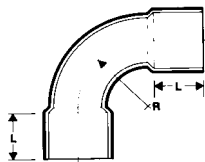

90 Degree Elbows - Female/Female


Nominal Bore (mm)	Order Code	Std Pack
15	DEN015	10
20	DEN020	10
25	DEN025	10
32	DEN032	10
40	DEN040	10
50	DEN050	1

Copper Fittings for New Zealand Plumbing
to suit NZ3501 plumbing tube

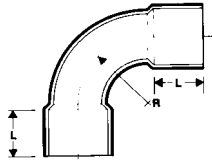


92.5 Degree Elbows - Female/Female

Nominal Bore (mm)	Order Code	Std Pack
65	DE2065	1
80	DE2080	1
100	DE2100	1
150	DE2150	1

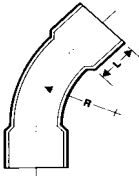

135 Degree Elbows - Female/Female

Nominal Bore (mm)	Order Code	Std Pack
15	DEF015	10
20	DEF020	10
25	DEF025	10
32	DEF032	10
40	DEF040	10
50	DEF050	1
65	DEF065	1
80	DEF080	1
100	DEF100	1
150	DEF150	1

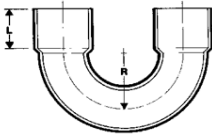


180 Degree Elbows - Female/Female

Nominal Bore (mm)	Order Code	Std Pack
15	DEU015	10
20	DEU020	10
25	DEU025	10


Copper Fittings for New Zealand Plumbing

to suit NZ3501 plumbing tube

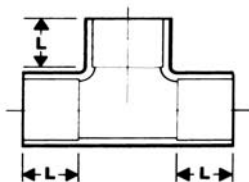


Equal Tees

Nominal Bore (mm)	Order Code	Std Pack
15	DTE015	10
20	DTE020	10
25	DTE025	10
32	DTE032	5
40	DTE040	5
50	DTE050	5
65	DTE065	1
80	DTE080	1
100	DTE100	1
150	DTE150	1

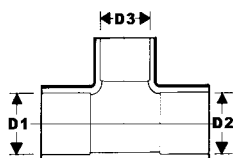


Reducing Tees

Nominal Bore (mm)	Order Code	Std Pack
20 x 15 x 15	DTR0201515	10
20 x 20 x 15	DTR0202015	10
20 x 15 x 20	DTR0201520	10
25 x 25 x 15	DTR0252515	10
25 x 25 x 20	DTR0252520	10

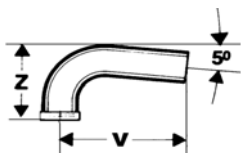

P Trap - Short Tail


Nominal Bore (mm)	Order Code	Std Pack
25	DSP025	1
32	DSP032	1
40	DSP040	1
50	DSP050	1
65	DSP065	1
80	DSP080	1

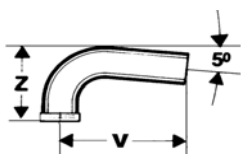

P Trap - Short Tail - Chrome Plated


Nominal Bore (mm)	Order Code	Std Pack
32	DSP032C	1
40	DSP040C	1
50	DSP050C	1
80	DSP080C	1

Copper Fittings for New Zealand Plumbing *to suit NZ3501 plumbing tube*

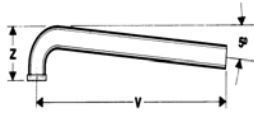


P Trap - Long Tail

Nominal Bore (mm)	Order Code	Std Pack
32	DLP032	1
40	DLP040	1
50	DLP050	1

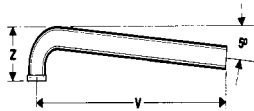


P Trap - Long Tail - Chrome Plated

Nominal Bore (mm)	Order Code	Std Pack
32	DLP032C	1
40	DLP040C	1
50	DLP050C	1

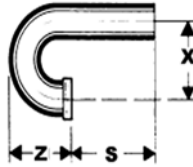


S Trap - Short Tail

Nominal Bore (mm)	Order Code	Std Pack
25	DSS025	1
32	DSS032	1
40	DSS040	1
50	DSS050	1
65	DSS065	1
80	DSS080	1

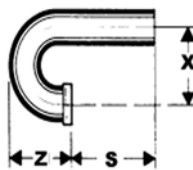

S Trap - Short Tail - Chrome Plated

Nominal Bore (mm)	Order Code	Std Pack
32	DSS032C	1
40	DSS040C	1
50	DSS050C	1
80	DSS080C	1

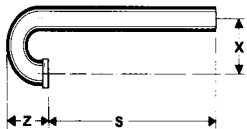

S Trap - Long Tail


Nominal Bore (mm)	Order Code	Std Pack
32	DLS032	1
40	DLS040	1
50	DLS050	1

Copper Fittings for New Zealand Plumbing to suit NZ3501 plumbing tube




S Trap - Long Tail - Chrome Plated

Nominal Bore (mm)	Order Code	Std Pack
32	DLS032C	1
40	DLS040C	1
50	DLS050C	1

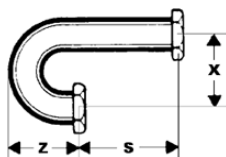


Inlets

Nominal Bore (mm)	Order Code	Std Pack
25	DIT025	1
32	DIT032	1
40	DIT040	1
50	DIT050	1
65	DIT065	1
80	DIT080	1

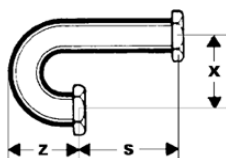


Inlets - Chrome Plated

Nominal Bore (mm)	Order Code	Std Pack
32	DIT032C	1
40	DIT040C	1
50	DIT050C	1
80	DIT080S	1



Flush Pipes


Nominal Bore (mm)	Order Code	Std Pack
40 - Long	DFP040750	1
40	DFP040	1
50	DFP050	1



Flush Pipes - Chrome Plated

Nominal Bore (mm)	Order Code	Std Pack
40 - Long	DFP040750C	1
40	DFP040C	1

Copper Fittings for New Zealand Plumbing
to suit NZ3501 plumbing tube

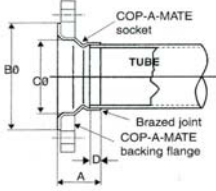

Cop-A-Mate Flanges

Nominal Bore (mm)	Order Code	Std Pack
40	DCF040	1
50	DCF050	1
65	DCF065	1
80	DCF080	1
100	DCF100	1
125	DCF125	1
150	DCF150	1
200	DCF200	1